

## **GPS SPEED ALERT OPERATING INSTRUCTIONS**

When unit is first powered up the main screen is displayed.



The main screen consists of the selected speed limit in small text at the top, the current speed indication in large text in the middle and the units of measurement in small text at the bottom right hand side and the satellite status indicator bottom left hand side.

Speed alert limit is easily set via arrows. When set speed limit is exceeded the main speed display will change colour from blue to red and at the same time an audible alarm will sound alerting the driver.

A satellite status indicator is displayed on the bottom left hand corner, on initial power up the status symbol will indicate **T** until the unit has locked onto sufficient satellites and then it will indicate **T** this will take approximately three minutes depending on conditions, this will then be stored to memory and on subsequent power ups this time will be reduced.

### **Options Menu**

By pressing the bottom right hand button the options menu is accessible, this allows you to change the units of measurement and to enable/disable the buzzer. Use the up/down arrows to select function and the bottom button to change.